





Z A Ś L E P K I Z A W O R Ó W N A B O J O W Y C H


Ordering Code: **CP-X-Y-Z**

Example:CP-5A-2H-00

Example:CP-5A-2H-12

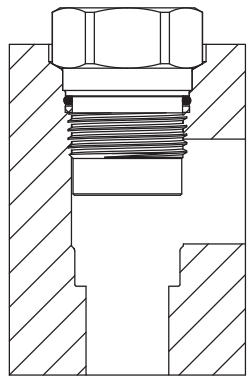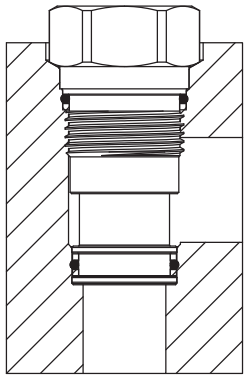

Example:CP-8A-2H-1G02

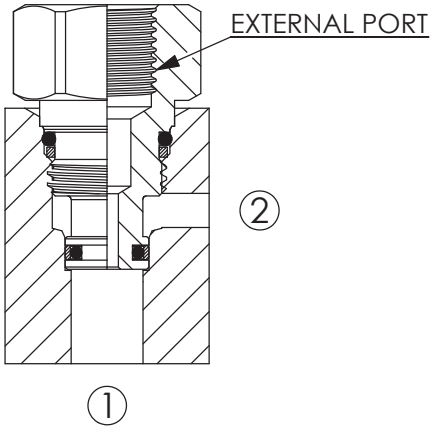

X	CAVITY-THREADS
162A	M16x1.5
8A	M16x1.5
10A	M20x1.5
13A	M20x1.5
3A	1.00-14UNS-2B
5A	1.00-14UNS-2B
16A	M36x2.0
18A	M48x2.0

Y	PORTS
2H	2 Holes

Z	OPERATIONS								
00	All Ports Blocked	162A	8A	10A	13A	3A	5A	16A	18A
12	Ports 1 and 2 Open Other Ports Blocked	162A	8A	10A	13A	3A	5A	16A	18A
1G02	PORT 1 TO EXTERNAL PORT G 1/4"		8A						

CAVITY PLUGS (A-type cavities)


Ordering Code: **CP-X-Y-Z**

Example: CP-2A-3H-00 Example: CP-2A-3H-12

X	CAVITY-THREADS
163A	M16x1.5
11A	M20x1.5
2A	1.00x14UNS-2B
17A	M36x2
19A	M48x2
Y	PORTS
3H	3 Holes


Z	OPERATIONS						
00	All Ports Blocked	163A	11A	2A	17A	19A	
12	Ports 1 and 2 Open Other Ports Blocked	163A	11A	2A	17A	19A	
13	Ports 1 and 3 Open Other Ports Blocked	163A	11A	2A	17A	19A	
23	Ports 2 and 3 Open Other Ports Blocked	163A	11A	2A	17A	19A	
123	Ports 1,2 and 3 Open	163A	11A	2A	17A	19A	

CAVITY PLUGS (A-type cavities)

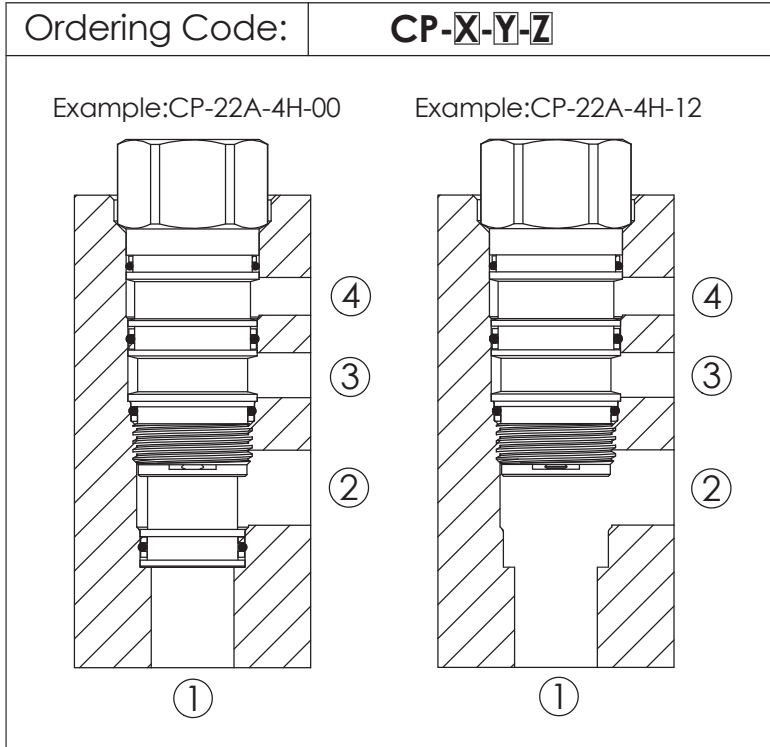


X	CAVITY-THREADS
21A	M20x1.5
22A	1.00-14UNS-2A
23A	M36x2.0
24A	M48x2.0
Y	PORTS
4H	4 Holes

Z	OPERATIONS						
00	All Ports Blocked	21A	22A	23A	24A		
12	Ports 1 and 2 Open Other Ports Blocked	21A	22A	23A	24A		

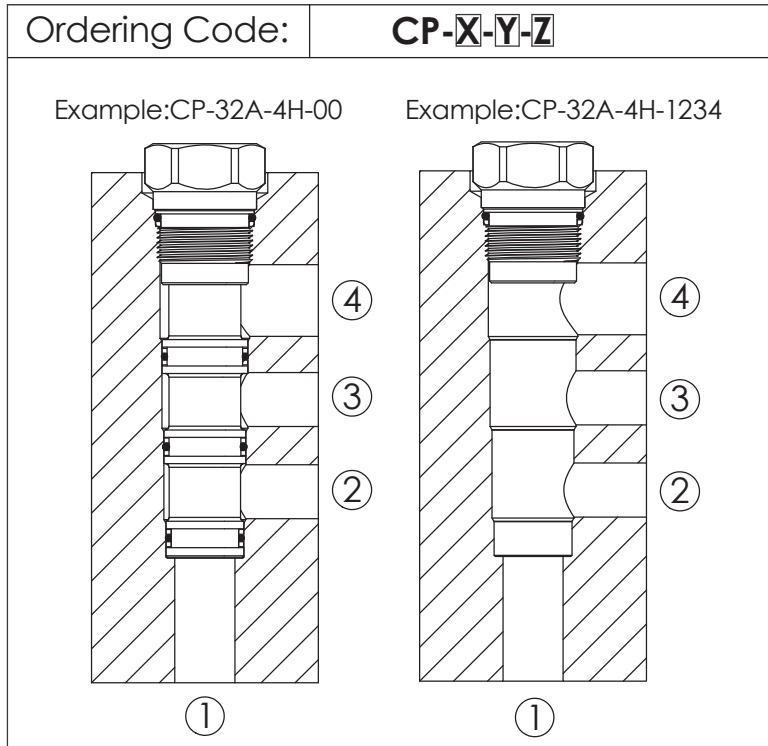



X	CAVITY-THREADS
31A	M20x2.0
32A	1.00-14UNS-2A
33A	M36x2.0
34A	M48x2.0
Y	PORTS
4H	4 Holes

Z	OPERATIONS					
00	All Ports Blocked	31A	32A	33A	34A	
12	Ports 1 and 2 Open Other Ports Blocked	31A	32A	33A	34A	
13	Ports 1 and 3 Open Other Ports Blocked	31A	32A	33A	34A	
14	Ports 1 and 4 Open Other Ports Blocked	31A	32A	33A	34A	
23	Ports 2 and 3 Open Other Ports Blocked	31A	32A	33A	34A	
24	Ports 2 and 4 Open Other Ports Blocked	31A	32A	33A	34A	
34	Ports 3 and 4 Open Other Ports Blocked	31A	32A	33A	34A	
123	Ports 1,2 and 3 Open Other Ports Blocked	31A	32A	33A	34A	
124	Ports 1,2 and 4 Open Other Ports Blocked	31A	32A	33A	34A	
234	Ports 2,3 and 4 Open Other Ports Blocked	31A	32A	33A	34A	
1234	All Ports Open	31A	32A	33A	34A	

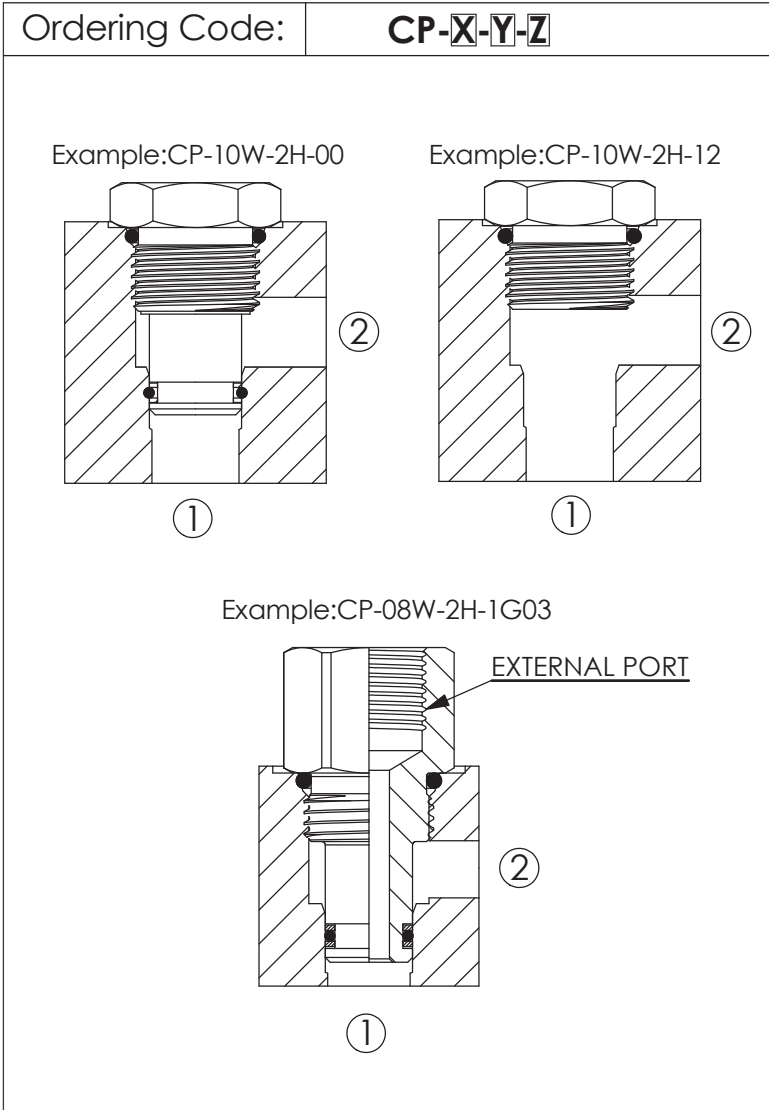


X	CAVITY-THREADS
08W	3/4"-16UNF-2B
10W	7/8"-14UNF-2B
12W	1 1/16"-12UN-2B
16W	1 5/16"12UN-2B
42W	M42x2.0
Y	PORTS
2H	2 Holes

Z	OPERATIONS					
00	All Ports Blocked	08W	10W	12W	16W	42W
12	Ports 1 and 2 Open	08W	10W	12W	16W	42W
1G03	PORT 1 TO EXTERNAL PORT G 3/8"	08W				
2G03	PORT 2 TO EXTERNAL PORT G 3/8"	08W				
1J03	PORT 1 TO EXTERNAL PORT PF 3/8"	08W				
2S06	PORT 2 TO EXTERNAL PORT SAE 9/16"	08W				

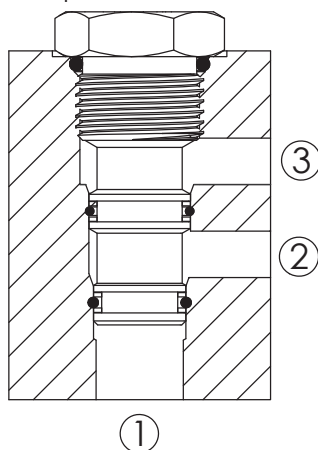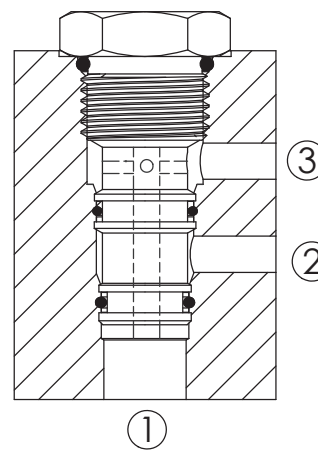Ordering Code:	CP-X-Y-Z	X	CAVITY-THREADS
<p>Example:CP-10W-3H-00</p>  <p>Example:CP-10W-3H-13</p> 	08W	3/4"-16UNF-2B	
	10W	7/8"-14UNF-2B	
	12W	1 1/16"-12UN-2B	
	16W	1 5/16"-12UN-2B	
	12B	1 1/16"-12UN-2B	
	20WS	1 5/8"-12UN-2A	
	Y	PORTS	
	3H	3 Holes	

Z	OPERATIONS						
00	All Ports Blocked	08W	10W	12W	16W	12B	
12	Ports 1 and 2 Open Other Ports Blocked	08W	10W	12W	16W	12B	20WS
13	Ports 1 and 3 Open Other Ports Blocked	08W	10W	12W	16W		
23	Ports 2 and 3 Open Other Ports Blocked	08W	10W	12W	16W		
123	Ports 1,2 and 3 Open Other Ports Blocked	08W	10W	12W	16W		
	PS. CP08W3H123 as same as CP08W2H12						

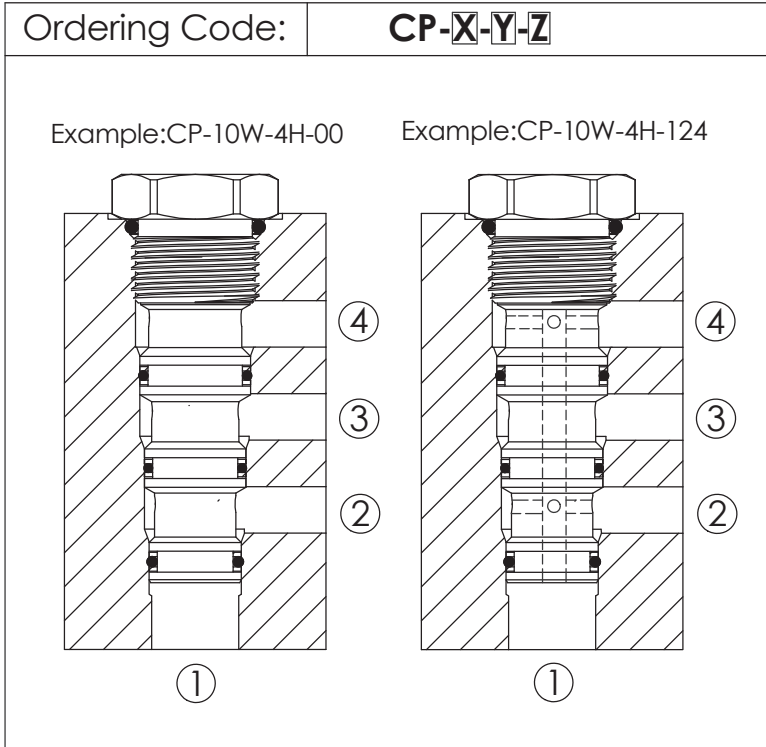

X	CAVITY-THREADS
08W	3/4"-16UNF-2B
10W	7/8"-14UNF-2B
12W	1 1/16"-12UN-2B
16W	1 5/16"-12UN-2B
20WS	1 5/8"-12UN-2A

Y	PORTS
4H	4 Holes

Z	OPERATIONS					
00	All Ports Blocked	08W	10W	12W	16W	20WS
12	Ports 1 and 2 Open Other Ports Blocked	08W	10W	12W	16W	20WS
13	Ports 1 and 3 Open Other Ports Blocked	08W	10W	12W	16W	
14	Ports 1 and 4 Open Other Ports Blocked	08W	10W	12W	16W	
23	Ports 2 and 3 Open Other Ports Blocked	08W	10W	12W	16W	
24	Ports 2 and 4 Open Other Ports Blocked	08W	10W	12W	16W	
34	Ports 3 and 4 Open Other Ports Blocked	08W	10W	12W	16W	
123	Ports 1,2 and 3 Open Other Ports Blocked	08W	10W	12W	16W	
124	Ports 1,2 and 4 Open Other Ports Blocked	08W	10W	12W	16W	
234	Ports 2,3 and 4 Open Other Ports Blocked	08W	10W	12W	16W	
1234	All Ports Open	08W	10W	12W	16W	
PS. CP08W4H1234 as same as CP08W2H12						
12-34	Ports 1 and 2 Open Ports 3 and 4 Open Ports 2 and 3 Blocked	08W	10W	12W	16W	

CAVITY PLUGS (E-type cavities)

Ordering Code: **CP-X-Y-Z**



Example: CP-17E-2H-00 Example: CP-17E-2H-12

X	CAVITY-THREADS
19E	3/4"-16UNF-2B
17E	G 3/4"
21E	G 1"
04E	G 1 1/4"

Y	PORTS
2H	2 Holes

Z	OPERATIONS					
00	All Ports Blocked	19E	17E	21E	04E	
12	Ports 1 and 2 Open Other Ports Blocked	19E	17E	21E	04E	

CAVITY PLUGS (M-type cavities)

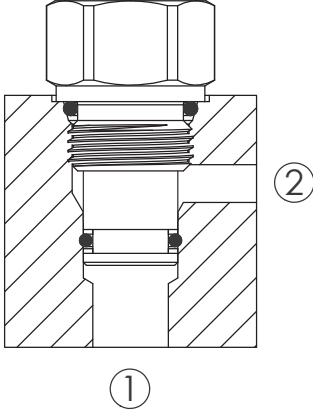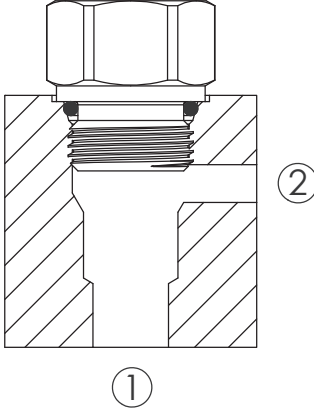Ordering Code:	CP-X-Y-Z
<div style="display: flex; justify-content: space-around; align-items: flex-start;"> <div style="text-align: center;"> <p>Example: CP-20M-2H-00</p>  </div> <div style="text-align: center;"> <p>Example: CP-20M-2H-12</p>  </div> </div>	

X	CAVITY-THREADS
20M	M20xP1.5
28M	M28xP1.5
Y	PORTS
2H	2 Holes

Z	OPERATIONS					
00	All Ports Blocked	20M	28M			
12	Ports 1 and 2 Open	20M	28M			

CENTRALA ELBLĄG

Ul. Rawska 19B
82-300 Elbląg

tel. /+48/ 55 625 51 00

fax /+48/ 55 625 51 01

Dział Handlowy

tel. /+48/ 55 625 51 51

elblag@hydropress.pl



www.hydropress.pl

ODDZIAŁ GDAŃSK

tel. /+48/ 55 625 51 21

fax /+48/ 55 625 51 22

ODDZIAŁ RUMIA

tel. /+48/ 58 679 34 15

fax /+48/ 55 625 51 25

ODDZIAŁ TYCHY

tel. /+48/ 32 787 52 88

fax /+48/ 55 625 51 38

ODDZIAŁ OLSZTYN

tel. /+48/ 89 532 01 05

fax /+48/ 89 715 21 42

ODDZIAŁ WARSZAWA

tel. /+48/ 22 468 86 97

fax /+48/ 55 625 51 32

BIURO WE WROCŁAWIU

tel. /+48/ 782 838 000

fax /+48/ 55 625 51 35

BIURO W KIELCACH

tel. /+48/ 885 995 501

fax /+48/ 55 625 51 01

BIURO W KRAKOWIE

tel. /+48/ 885 995 019

fax /+48/ 55 625 51 01

BIURO W OPOLU

tel. /+48/ 885 995 011

fax /+48/ 55 625 51 01

BIURO W BYDGOSZCZY

tel. /+48/ 790 222 771

fax /+48/ 55 625 51 01

BIURO W BIAŁYMSTOKU

tel. /+48/ 89 532 01 05

fax /+48/ 89 715 21 42

BIURO W ŁODZI

tel. /+48/ 609 221 421

fax /+48/ 89 715 21 42